



Fig. 37: Spare parts overview

Number	Spare part	Number	Spare part
1.1	Coil body group	4	Cover Specify greatest outer diameter.
1.2	Friction lining group	6	O-ring
1.3	Brake flange	7	Cheese-head screw
1.4	Armature plate	8	Cheese-head screw
1.5	Nut	9	Locking screw
1.6	Cheese-head screw, self-locking	10	Setscrew
1.7	Hexagonal nut, self-locking	11	Cap nut
1.8	Compression coil spring	13	Sealing ring
2	Cover plate group	14	Sealing ring
3	Intermediate flange Specify outer diameter and thickness	15	Driving hub (pinion) Specify bore diameter, groove and length.

Tab. 18: Spare parts